

# ETC® Console Hotkeys

## Eos Family v2.7.0

### Eos Family Hotkeys

To enable Eos functions on Mac Function keys:

- Open Systems Preferences
- Go into the Keyboard section
- Enable the “Use all F1, F2, etc... keys as standard function keys” setting.



**Note:** Some international keyboards require “Use Shift Key as Eos Shift” to be disabled in the General section of the ECU Settings. Use Z as shift to access shortcut functions in these cases.

Console Key	PC	Console Key	PC	Console Key	PC
Shortcut List	Alt /	Capture	Control Alt P		Control 3
	?	Clear	Backspace	Focus Filter	Control F
0	0	Clear Command Line	Shift Backspace	Focus Palette	Alt F
1	1		Control Alt Backspace	Follow/Hang	Shift D
2	2	Clear Label	Control Backspace		Control Alt D
3	3	Color Filter	Control C	Format	F4
4	4	Color Palette	Alt C		Control 4
5	5	Color Path	Control Alt W	(Scroller) Frame	Control Alt C
6	6	Copy To	C	Freeze	Control Alt F
7	7	Cue	Q	Full	F
8	8	Cue Only/Track	X	Go	Spacebar
9	9	Data	Control D	Go To Cue	Control G
. (decimal)	. (decimal)	Data Mode	Control Shift D	Go to Cue Zero	Control Alt G
- (minus)	- (minus)	Delay	D	Group	G
+(plus)	=	Delete	Delete	Help	Alt /
	+	Delete (Mac)	Fn Delete	Highlight	\
+%	Shift =	Displays	F9		Control Alt H
	Control Alt =		Control 9	Home	Home
		Effect	Alt E		Control H
-%	Shift -	Effects Softkeys	Alt Shift E	Home (Mac)	Fn Left Arrow
	Control Alt -	Encoder Display (Gio)	Control Alt \	Intensity Block	Shift B
		Encoder Page Color^	Control Alt [		Control Alt B
/	/	Encoder Page Focus^	Control Alt ,	Intensity Filter	Control I
About	Y	Encoder Page Form^	Control Alt ;	Intensity Palette	Alt I
Address/Dimmer	Alt A	Encoder Page Image^	Control Alt ]	Label/Note	L
All NPs	Control N	Encoder Page Intensity^	Alt .	Last	Page Up
Assert	Control W	Encoder Page Shutter^	Alt ,		Control ,
Assert (Playback)	Control Alt A	Enter	Enter	Last (Mac)	Fn Up Arrow
At	A	Escape	Escape	Learn	Alt L
	@	Expand	F5	Level	V
	*		Control 5	Live	F1
Beam Filter	Control B	Fader Pages	Control P		Control 1
Beam Palette	Alt B	Fan	W	Load	Control Alt L
Blind	F2	FlexiChannel	F3	Macro	M
	Control 2			Macro 801*	Control Alt 1
Block	B			Macro 802*	Control Alt 2



Corporate Headquarters ■ Middleton, WI, USA ■ Tel +608 831 4116 ■ Service: (Americas) service@etconnect.com  
 London, UK ■ Tel +44 (0)20 8896 1000 ■ Service: (UK) service@etceurope.com  
 Rome, IT ■ Tel +39 (06) 32 111 683 ■ Service: (UK) service@etceurope.com  
 Holzkirchen, DE ■ Tel +49 (80 24) 47 00-0 ■ Service: (DE) techserv-hoki@etconnect.com  
 Hong Kong ■ Tel +852 2799 1220 ■ Service: (Asia) service@etcasia.com  
 Web: www.etconnect.com ■ © 2018 ETC. All Rights Reserved. ■ Product information and specifications subject to change.  
 Rev:A ■ Released 2018-05 ■ ETC intends this document to be provided in its entirety.

# ETC Console Hotkeys

## Eos Family Hotkeys

Console Key	PC	Console Key	PC	Console Key	PC
Macro 803*	Control Alt 3	Record	R	Update	U
Macro 804*	Control Alt 4	RecordOnly	Control R	Virtual Keyboard	Control K
Macro 805*	Control Alt 5	Release	Control Alt S	Workspace	] or [
Macro 806*	Control Alt 6	Rem Dim	H		
Macro 807*	Control Alt 7	Scroll Lock	F6	<b>Shell Shortcut</b>	
Macro 808*	Control Alt 8		Control 6	<b>Shell Key</b>	<b>PC</b>
Macro 809*	Control Alt 9	Select	Control Enter	0	0
Macro 810*	Control Alt 0	Select Active	Control A	1	1
Magic Sheet	Alt M	Select Last	Control L	2	2
Manual Override	Control Alt M	Select Manual	Control M	3	3
	Control Alt N	Setup	Alt S	4	4
Mark	K	Shift	Z	5	5
Mirror, Start	Alt F1	Snapshot	Control S	6	6
Mirror, Stop	Alt F2	Sneak	N	7	7
ML Controls	F7	Softkey 1	Alt 1	8	8
	Control 7	Softkey 2	Alt 2	9	9
More Softkeys	Alt 7	Softkey 3	Alt 3	. (decimal)	. (decimal)
Next	Page Down	Softkey 4	Alt 4	- (minus)	- (minus)
	Control .	Softkey 5	Alt 5	+ (plus)	=
Next (Mac)	Fn Down Arrow	Softkey 6	Alt 6	/	/
Off	Control Alt O	Spacebar Disable	Alt G	Arrow, Down	Arrow, Down
Offset	Control O	Stop/Back	Control Spacebar	Arrow, Left	Arrow, Left
Out	O		Control Alt Q	Arrow, Right	Arrow, Right
Page Left	Left Arrow	Stop Effect	Control Alt E	Arrow, Up	Arrow, Up
Page Right	Right Arrow		Control Alt K	Back	Esc
Page Up	Up Arrow	Submaster	S	Clear	Backspace
Page Down	Down Arrow	Tab	Tab	Delete	Delete
Parameters (Display)	Control D	Time	I	Enter	Enter
Park	Alt K	Time (Displays)	Shift I	Escape	Esc
Part	P		Control Alt I	Select	Return
Patch	::	Timing Disable	Control Alt T		
Pixelmap	Alt X	Toggle Hotkeys	F8		
Preset	Alt P		Control 8		
Query	Control Q	Trace	J		
Rate	Control Alt R	Thru	T		
Recall From	E	Undo	Control X		

\*Some Shortcut Key combinations are not available on all physical keyboard layouts.

^Alternatively use Encoder Display + category to change the encoder pages.